

GODLIKE-S681 ELECTRONIC USER MANUAL

Comprehensive Operating Guide, Safety Instructions & Technical Specifications

1. Original User Manual Reference

Below is the complete high-resolution reference scan of the original product instruction manual. Please refer to this for visual placement of buttons, charging ports, and dimensions.

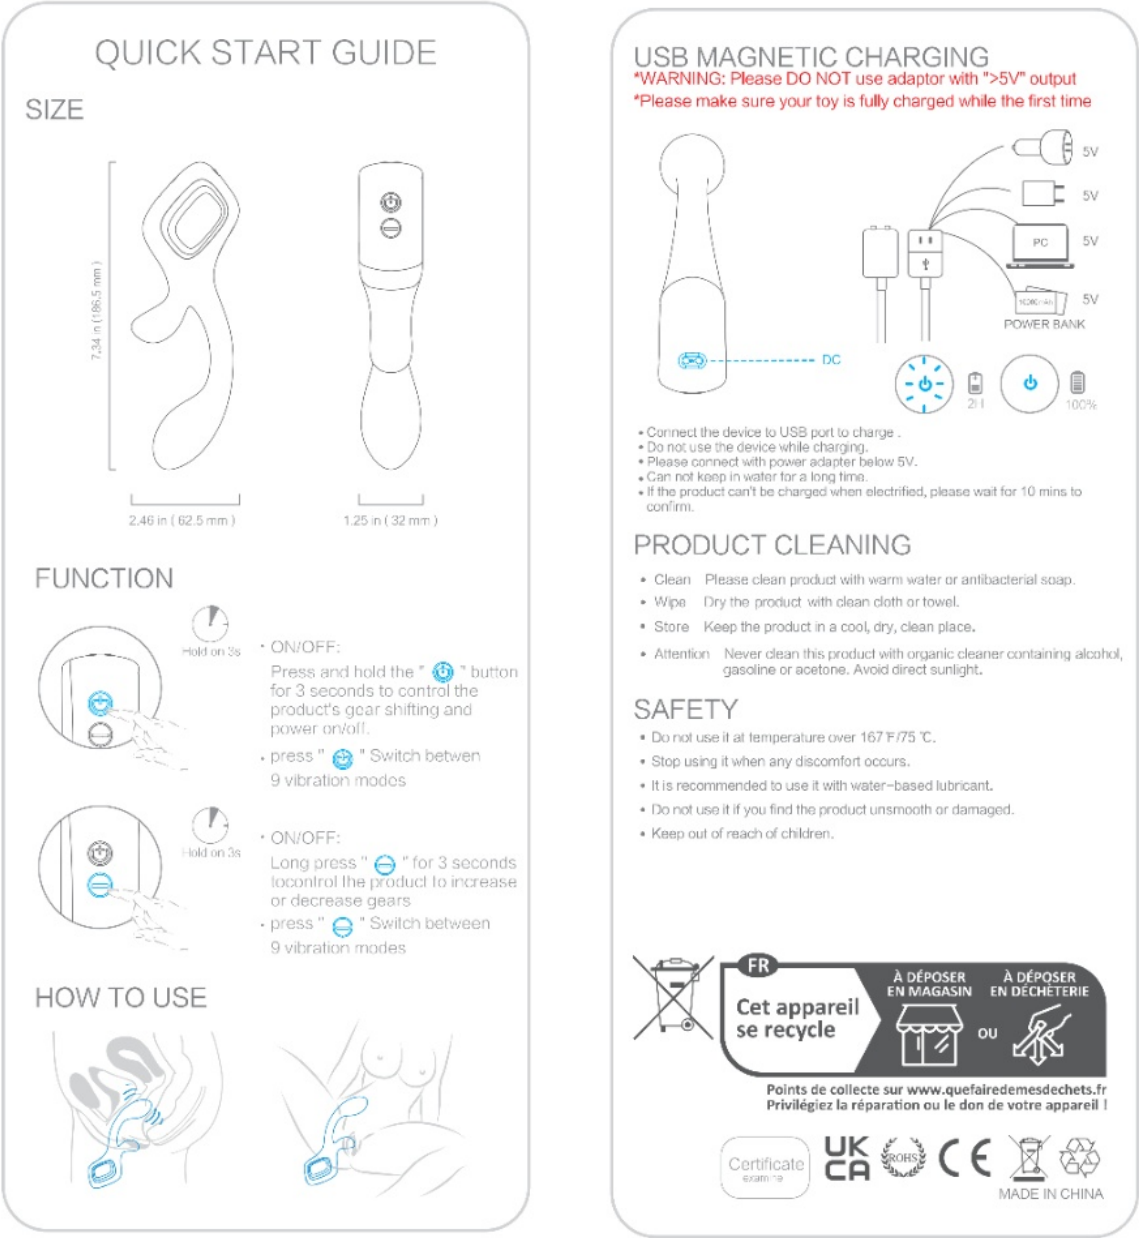


Figure 1.1: Official Quick Start Guide & Instructions for GODLIKE-S681

2. Product Specifications & Dimensions

Parameter	Specification
Product Model	GODLIKE-S681
Total Length	7.34 in (186.5 mm)
Max Width	2.46 in (62.5 mm)
Handle Diameter	1.25 in (32 mm)

Parameter	Specification
Charging Time	Approx. 2 Hours
Battery Capacity	100% Full Charge Indicator
Vibration Modes	9 Modes per motor
Interface	USB Magnetic DC Charging

3. Function & Dual-Button Operation Guide

The device features independent dual motors controlled via two dedicated tactile buttons on the handle interface.

Button 1 Upper Button (Power & Main Vibration)

- **ON / OFF:** Press and hold the ☉ button for 3 seconds to power the device on or off.
- **Mode Switching:** Short press the ☉ button to cycle through **9 distinct vibration modes**.

Button 2 Lower Button (Gear Shifting & Intensity)

- **ON / OFF / Intensity:** Long press the ☉ button for 3 seconds to control gear progression (increase / decrease intensity).
- **Mode Switching:** Short press the ☉ button to switch between secondary vibration patterns (9 modes).

OPERATING TIP: Both buttons can be operated simultaneously or independently to customize your experience across dual stimulation zones.

4. USB Magnetic Charging & Power Guidelines

CRITICAL WARNINGS:

- ⚠ **DO NOT** use any power adapter with an output greater than **5V** (>5V output will damage the internal battery).
- ⚠ Please ensure your toy is fully charged prior to its first use.

Charging Instructions:

- Connect the magnetic DC cable to the charging port at the base of the device.
- Compatible power sources include 5V USB wall chargers, computer USB ports, and 5V power banks.
- **Charging Indicator:** Charging icon flashes during charging; solid light indicates 100% full charge (approx. 2 hours charging time).

- **Safety Interlock:** Do not use the device while charging. If the product fails to charge immediately when connected after total depletion, please wait for 10 minutes for recovery.

5. Product Cleaning & Maintenance

HYGIENE & CARE GUIDELINES: Proper maintenance ensures product longevity and skin safety.

- **Cleaning:** Clean the product thoroughly before and after each use with warm water and antibacterial toy cleaner or mild soap.
- **Drying:** Wipe dry with a clean, lint-free cloth or towel. Allow to air dry completely before storing.
- **Storage:** Store the product in a cool, dry, and clean place away from direct sunlight and dust.
- **⚠️ PROHIBITED CLEANERS:** Never clean this product with organic cleaners containing alcohol, gasoline, or acetone. Avoid soaking in water for extended periods.

6. Safety Precautions & Warnings

IMPORTANT SAFETY ADVISORIES:

- **🔥 Temperature Limit:** Do not use or expose the device to temperatures exceeding 167°F / 75°C.
- **🛑 Discomfort Protocol:** Stop using immediately if any discomfort, irritation, or pain occurs.
- **💧 Lubrication:** It is highly recommended to use water-based lubricants only. Silicone-based lubricants may damage the silicone body.
- **🔍 Inspection:** Do not use the product if you find the surface unsegmented, unsmooth, cracked, or damaged.
- **👶 Child Safety:** Keep out of reach of children at all times.